

Language learning assistant

LINGOGET



User Manual

LINGOGET

Contents:

1. Package Contents.....	2
2. Familiarize yourself with the LingoGet learning assistant.....	2
2.1. Function keys.....	3
2.2. Battery charging.....	3
3. Start with your LingoGet learning assistant.....	3
3.1. Download the app.....	3
3.2. Pairing your LingoGet with IOS smartphones.....	4
3.3. Pairing your LingoGet with Android smartphones.....	6
4. Choose your settings.....	7
5. Start learning with LingoGet.....	8


1. Package Contents:

- Language learning device
- Micro USB charger cable
- User manual

2. Familiarize yourself with the LingoGet learning assistant.

Take a few moments to familiarize yourself with the device. You may find it helpful to bookmark this section and refer to it as you read through the rest of the manual.

LingoGet body

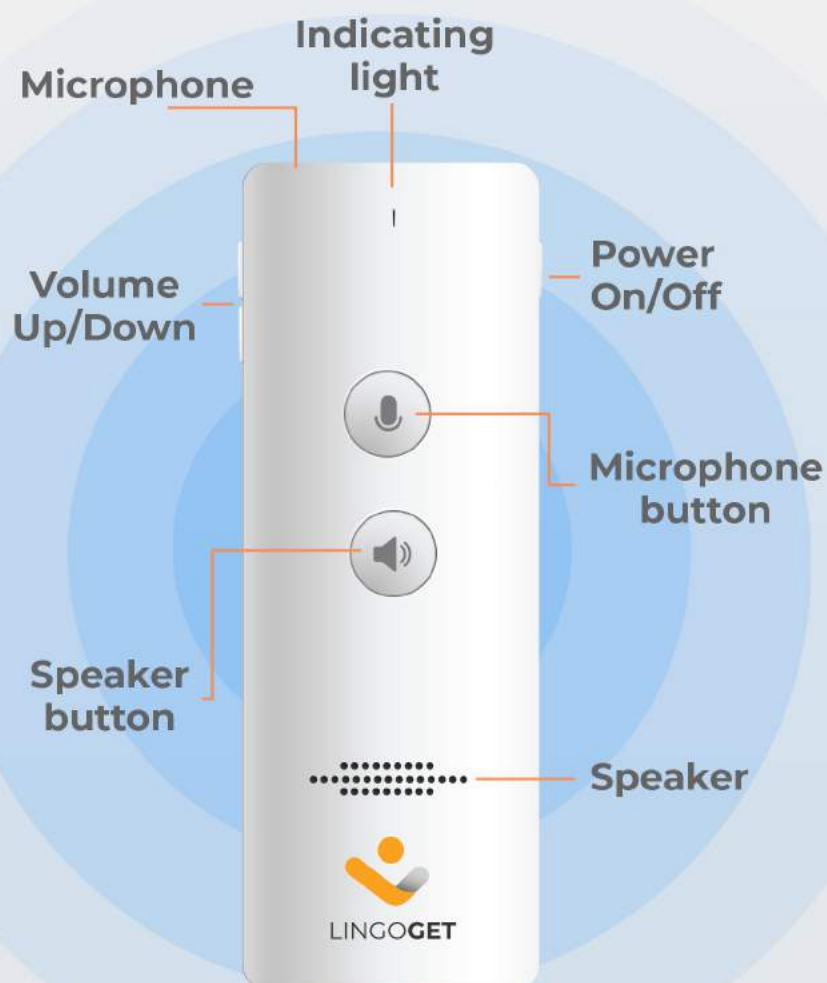

2.1. Function keys.

Power

- Turn ON/OFF: Push and hold this key for 2 seconds to turn the device on.

Volume

- Push Up/Down to increase or decrease the volume. You can also increase volume on your mobile device.

2.2. Battery charging.

- Plug the charger into an electric socket and the micro USB cable into the device to charge the battery.
- The light on the device will turn red when charging.
- The battery is fully charged after about 4 hours.
- After the battery is charged, remove the charger and the USB cable.

3. Start with your LingoGet learning assistant.



Once your LingoGet is paired with your smartphone, you will not need to repeat the following instructions again!


3.1. Download the app:

3.1.1. Connect your smartphone to a Wi-Fi or mobile network.

3.1.2. Make sure your smartphone Bluetooth is on.

3.1.3. Scan the QR code on the box or paper manual and download the LingoGet app. Or go to the link below to download the app:


www.muama.com/lingoget/app

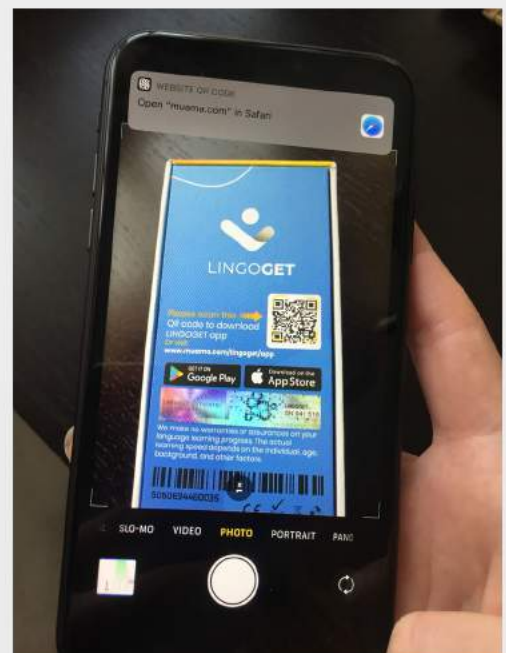


3.4. Pairing your LingoGet with **IOS** smartphones.

3.4.1. Open your LingoGet app.

3.4.2. Allow the LingoGet app to use the microphone. Press OK.

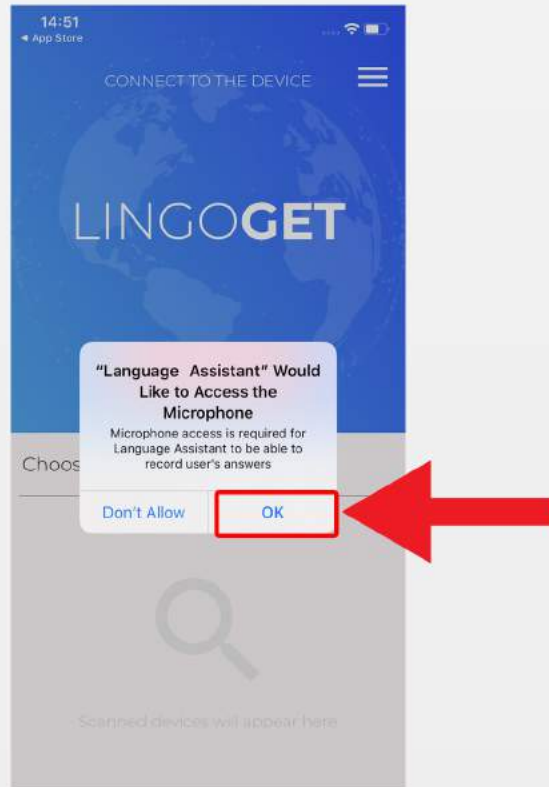


3.4.3. Allow the LingoGet app to use Bluetooth. Press OK.

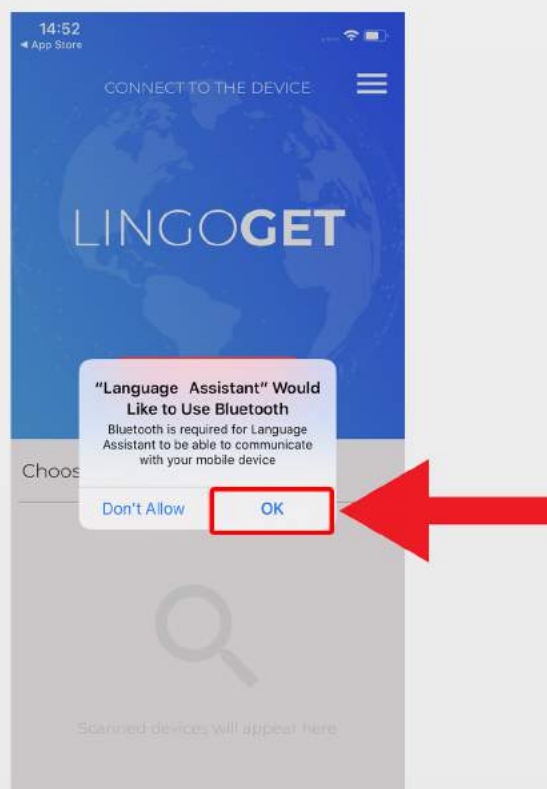

3.4.4. Turn on the LingoGet device by pressing the power button and holding it for 2 seconds. You will hear a voice message that says it is working.

3.4.5. Read through the connection guide on your app.

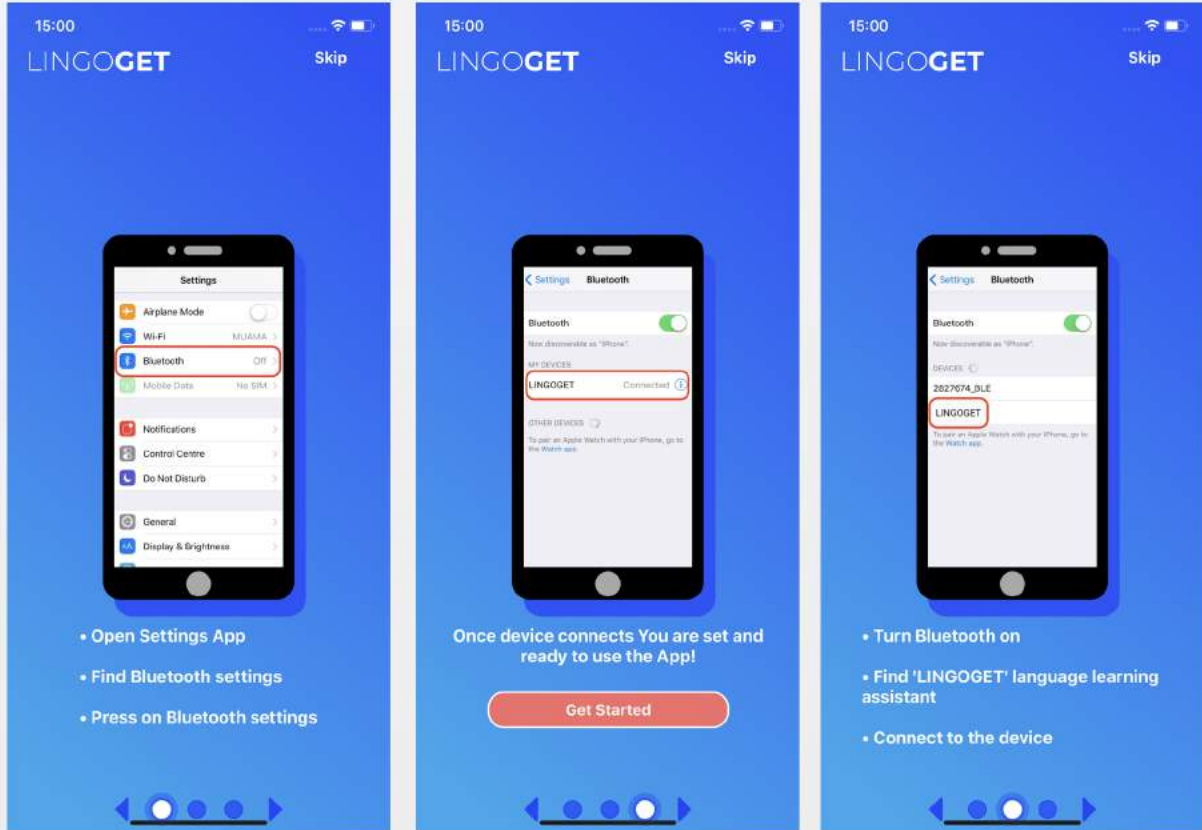


3.4.6. Go to your phone's settings, open Bluetooth settings and turn Bluetooth ON.

3.4.7. In the Bluetooth settings press on 'LINGOGET'. You will hear a voice message that says your device is connected.



3.4.8. Go back to the LingoGet app and press “Scan” on your phone screen.


3.4.9. Select “LingoGet Language Learning Assistant” to pair your smartphone with the translator.

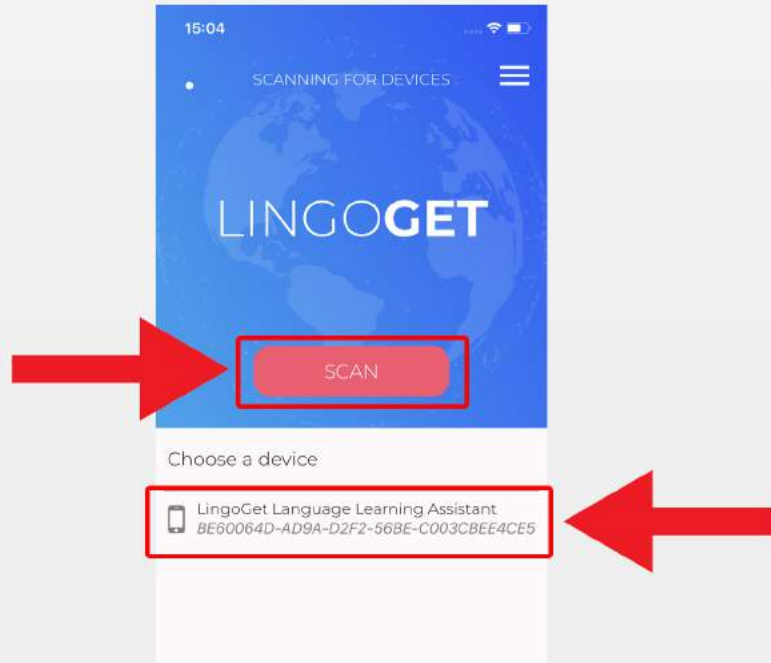

3.5. Pairing your LingoGet with  **Android** smartphones.

3.5.1. Open the LingoGet app.


3.5.2. Press “ALLOW” on all the following notifications.

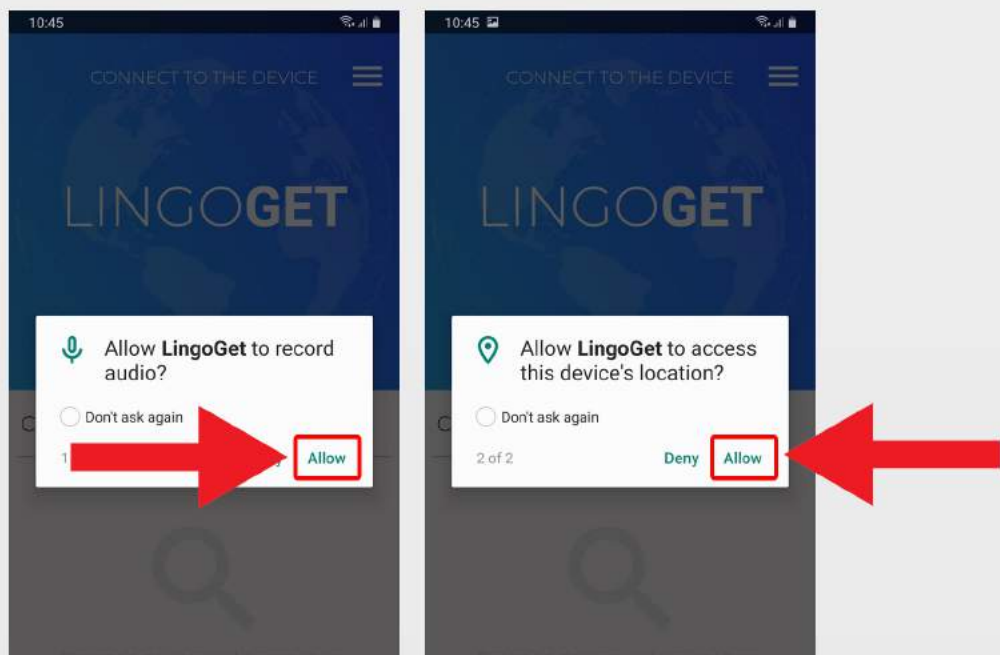

3.5.3. Turn on the LingoGet device by pressing the power button and holding it for 2 seconds.

3.5.4. Press “scan” on your phone screen.

3.5.5. Select “LingoGet Language Learning Assistant” to pair your smartphone with the LingoGet.

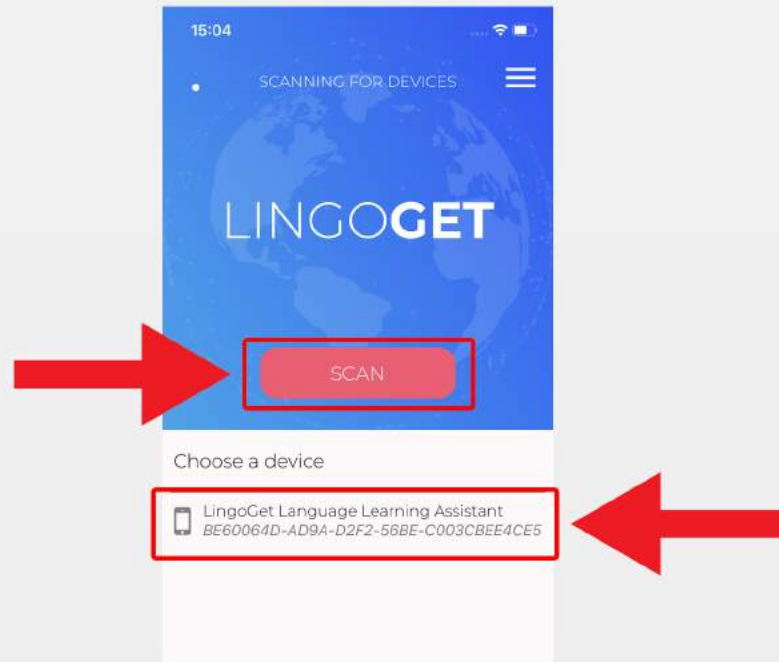


3.5.6. You will hear a voice message that says your device is connected.

4. Choose your settings.

4.1. Select your native language in the upper box.

4.2. Choose a language you want to learn in the lower box and press “CONTINUE”.

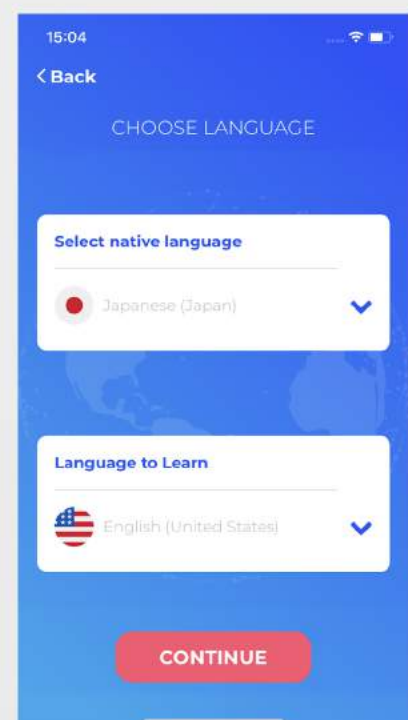

4.3. Choose the difficulty level.



5. Start learning with LingoGet.

5.1. Read through the learning instructions.



5.2. You will hear a word or phrase in the language you want to learn. Listen while the speaker light is on.




5.3. Press and hold the microphone icon on your LingoGet device. Wait for 2 seconds and repeat the word/phrase that you are learning while the microphone icon is lit on the app.




5.4. If you want to hear the word/phrase again, press the speaker icon on your LingoGet device.




5.5. If you want to skip the word/phrase, press the “SKIP” button on your LingoGet app.

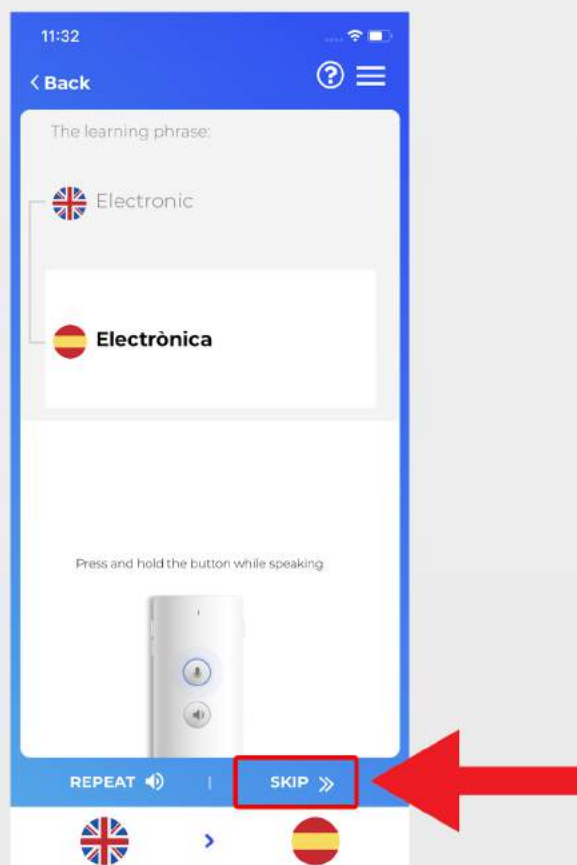

5.6. When you say the word/phrase correctly you will see a green “Correct” message on your app.

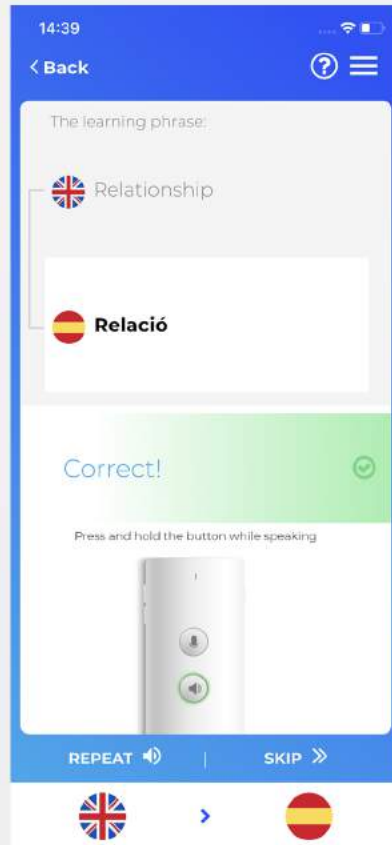

5.7. If you see a red message that says ‘incorrect’, try to repeat the learning word/phrase loudly and clearly while holding the microphone button on your LingoGet device.

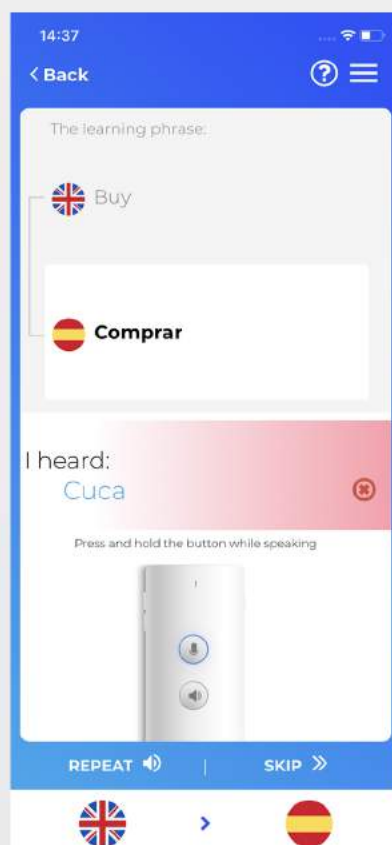



LINGOGET

**Happy
learning!**